

AquaLight[™] and SpaBrite[™]


Compact Pool and Spa Lights

High intensity compact lights from the world leader in pool and spa lighting

AquaLight and SpaBrite lights are compact units especially designed to provide big lighting performance for smaller pools and spas. Whether you choose the halogen quartz AquaLight or the incandescent SpaBrite, your pool or spa will shine brilliantly when the sun goes down. Both lights feature high quality stainless steel housings and face rings for durability. Tempered glass lenses provide optimum light diffusion. Each light comes complete with red and blue snap-on lens covers.

Standard features include:

- Prismatic tempered glass lens for optimum light diffusion.
- Optional blue, magenta, green, purple, and blue-green mood-setting snap-on lenses.
- Heat-sensing cut-off device for low water protection.
- AquaLight available with halogen quartz lamps from 75 watts to 250 watts. SpaBrite features 100 watt incandescent lamp.
- Corrosion resistant stainless steel housing and face rings are strong and durable.
- Plastic snap-on face rings available to coordinate with your pool finish.
- Easy service stainless steel clamp for quick and easy bulb replacement.
- Three-year warranty. See warranty for details.

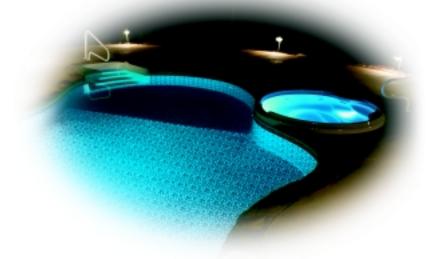







SpaBrite® / AquaLight® Underwater Light Owner's Manual

IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS

Table of Contents

SECTION I.	Installing Light Fixture During New Pool Construction	1
SECTION II.	Replacing Light Fixture in Existing Pool	3
SECTION III.	Replacing A Lamp Only	4
SECTION IV.	Technical Data	6
SECCIÓNI.	Instalación del accesorio portalámpara durante la construcción de una piscina nueva	7
SECTION I.	Installation de l'appareil d'éclairage lors de la construction d'une nouvelle piscine	4

A DANGER



Risk of Electrical Shock or Electrocution.

This underwater light must be installed by a licensed or certified electrician in accordance with the National Electrical Code and all applicable local codes and ordinances, Improper installation will create an electrical hazard which could result in death or serious injury to pool users, installer, or others due to electrical shock, and may also cause damage to property. Read and follow the specific instructions below.

AWARNING

Before installing this underwater light, read and follow all warning notices and instructions accompanying this light. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage. Call (800) 831-7133 for additional free copies of these instructions.

Important Notice



Attention Installer

This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

- Installing light fixture during new pool construction.
- A. The electrician must complete preparatory steps before light fixture is installed; see Figure 1.
 - Ensure that the pool meets the requirements of the current National Electrical Code and all local codes and
 ordinances. A licensed or certified electrician must install the electrical system to meet or exceed those
 requirements before the underwater light is installed. Some of the requirements of the National Electrical
 Code which the pool's electrical system must meet are as follows.
 - The lighting circuit must have a Ground Fault Circuit Interrupter (GFCI), and must have an appropriately rated circuit breaker.

Pentair Pool Products 1620 Hawkins Ave., Sanford, NC 27330 • (919) 566-8000 10951 West Los Angeles Ave., Moorpark, CA 93021 • (805) 523-2400





- b. The Junction Box (or, for 12 volt models, the low voltage transformer) must be located at least eight (8) inches above water level, at least four (4) inches above ground level, and at least 48 inches from the edge of the pool; see Figure 1.
- The light fixture and all metal items within five (5) feet of the pool must be properly electrically bonded.
- 48" To GFCI, Circuit 4" min Breaker and 8" min. Junction Box or low Voltage Transformer. Power Source. Conduit 8° min. to top of Lens. #8 AWG Ground Concrete must be out Connector bonded hack arround Niche to to rebar. allow for a compacted plaster seal. Figure 1.
- d. The wet niche must be properly installed so that the top edge of the underwater light's lens is at least 18 inches below the surface of the water in the pool; see Figure 1.
- e. The wet niche must be properly electrically bonded and grounded via the No. 8 AWG ground connector located at the rear of the niche; see Figure 1.

NOTE

The pool or spale ectrical system can be verified with a Pool and Spale etrical Qualification Test kit. The test kit is available from Pentair Pool Products. The electrical system inspection using this kit must be performed by trained and certified personnel.

- To be certain that the pool's electrical system meets all applicable requirements, the electrician should also consult the local building department.
- 3. Use only Pentair Pool Products wet niches to insure proper bonding and grounding connections.
- B. Steps to perform after the electrical system requirements are met.
 - Feed cord through conduit to Junction box, leaving at least four (4) feet of cord at the light fixture to coil around
 the light; see Figure 1. This four (4) feet of cord around the light allows the light to be serviced after the pool is
 filled with water.
 - 2. Cut the cord at the Junction Box, leaving at least six (6) inches of cord to make connections.
 - Strip six (6) inches of the outer cord jacket to expose the three insulated wires. Be careful not to damage the insulation on the three (3) inner wires.
 - Connect all three (3) wires to the corresponding circuit wires in the Junction Box, and secure the Junction Box cover in place.

AWARNING

Never operate this underwater light for more han 10 seconds unless it is batally submerged in water. Without total submersions with light assembly will get extremely hot, which may result in serious bums or in breakage of the lamp or lens. This may result in serious injury to pool users, installers, or bystanders, or in damage to property.

5. Replace the light assembly into niche and tighten special pilot screw.

AWARNING

Use only the special pilot screw provided with this underwater light. This screw mounts and electrically grounds the housing securely to the mounting ring and were inche. Failure to use the screw provided could create an electrical hazard which could result in death or serious injury to pool users, installers or others due to electrical shock.

6. Fill the pool until the underwater light is completely submerged in water before operating the light for more than 10 seconds. Turn on main switch or circuit breaker, as well as the switch which operates the underwater light itself to check for proper operation.